


STEP 1 - Meksua se ol tul blong joenem wetem baket i gat:

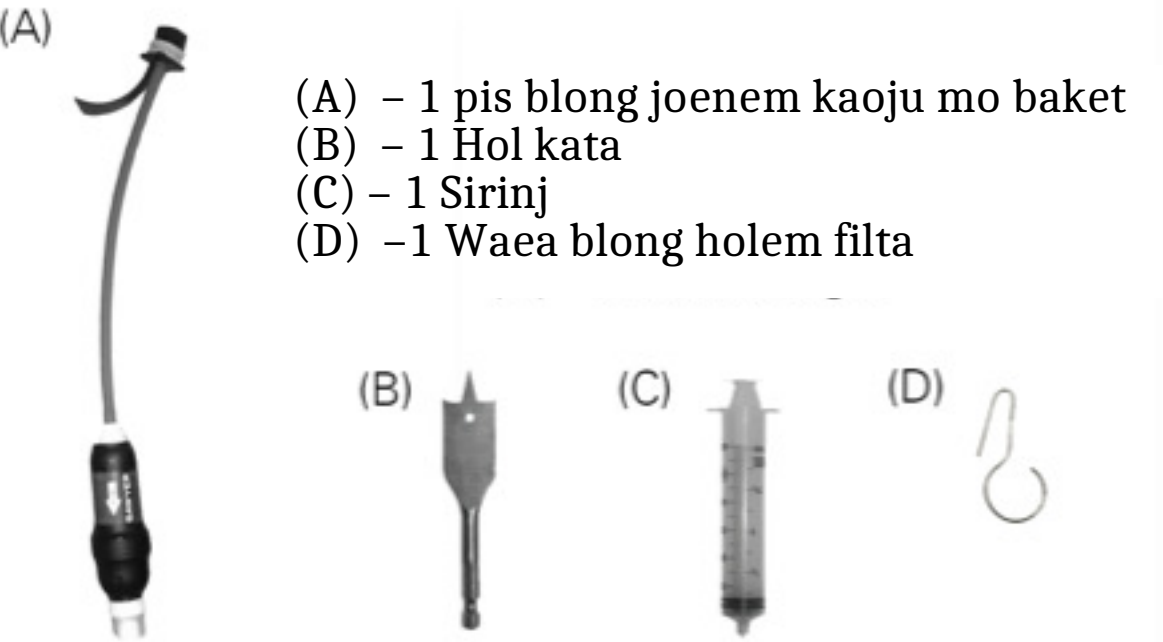

Go long www.sawyer.com blong lukum ol vidio blong soem hao blong yusum.

STEP 2 - Faenem wan Baket we i “Klin”




No yusum wan baket/plastik we i bin holem ol poison kemikel. Sipos i nogat, sud yusum wan baket we i stret blong holem ol kakae, olsem we i bin holem kakae taem yu bin pem.

STEP 3 – Katem Hol long Baket



NO MAS YUSUM WAN DRIL. YU SAVE YUSUM HAN BLONG YU. Katem wan hol we i 22 mm long saed blong baket. Yu mekem wetem hol kata (B) klosap (38mm) long botom blong baket. Sipos yu putum antap smol olsem hemia i sud mekem we no tumas doti i save go long filta. MEKSUA SE YU RAVEM GUD HOL BLONG I SMUT GUD. HEMIA BAE I HALPEM BLONG BAKET I NO LIK.

STEP 4 – Mekemrere pis blong joenem kaoju mo baket.

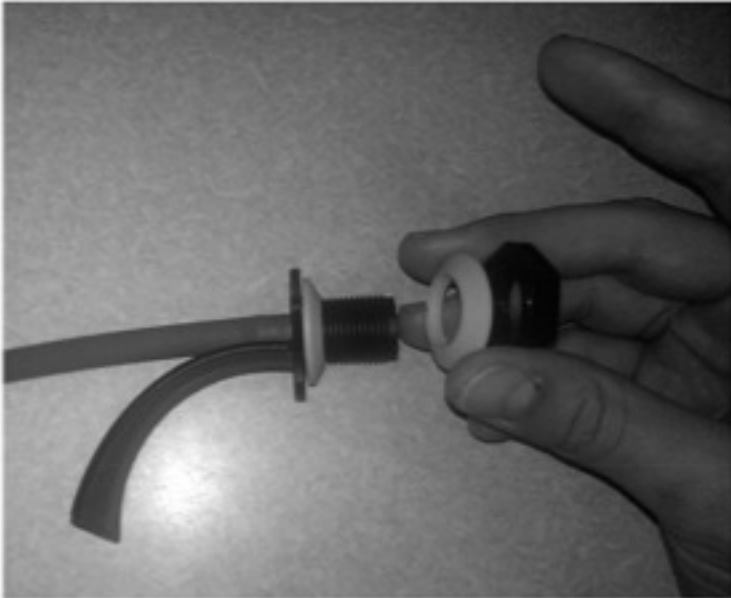


Karemaot plastic nat we i fas long tut blong skru mo karemaot kaoju blong aotsaed. Lego kaoju blong insaed i stap long tut blong skru.

STEP 5 – Putum pis blong joenem kaoju mo baket



Pusum pis ia long aotsaed blong baket we smolsmol en blong wasa i fesem baket.

STEP 6 – Putumbak kaoju mo nat

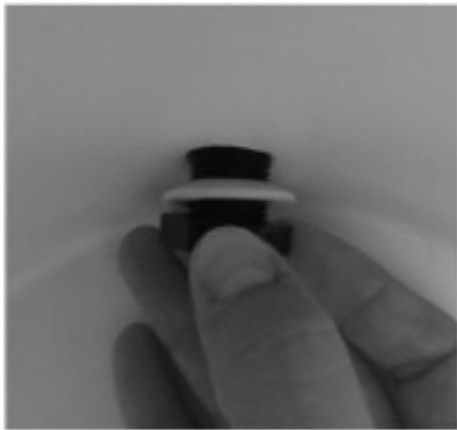

Putumbak kaoju mo nat long insaed long baket we smolsmol en blong wasa i fesem baket. Taetem gogo i joen gud blong i no save lik.

STEP 7 – Klinim wota



Putum wota long baket mo letem filta i godaon lo moa bitim botom blong baket blong wota i save ron. Sipos top blong wota we i stap long baket i longwe long filta, bae wota i ron kwiktaem. Sipos i klosap long filta, bae i slo moa. MEKSUA SE YU STAP PUTUM WOTA WE YU KLINIM I GO INSAED LONG WAN BAKET/PLASTIK/DIS WE I KLIN GUD.

STEP 8 – Hao blo Ofem Wota



Leftemap filta blong i hae moa bitim baket blong ofem wota we i ron long hem. Sipos yu no stap yusum filta, putum long waea blong holem, mo hangem waea ia long saed blong baket.